

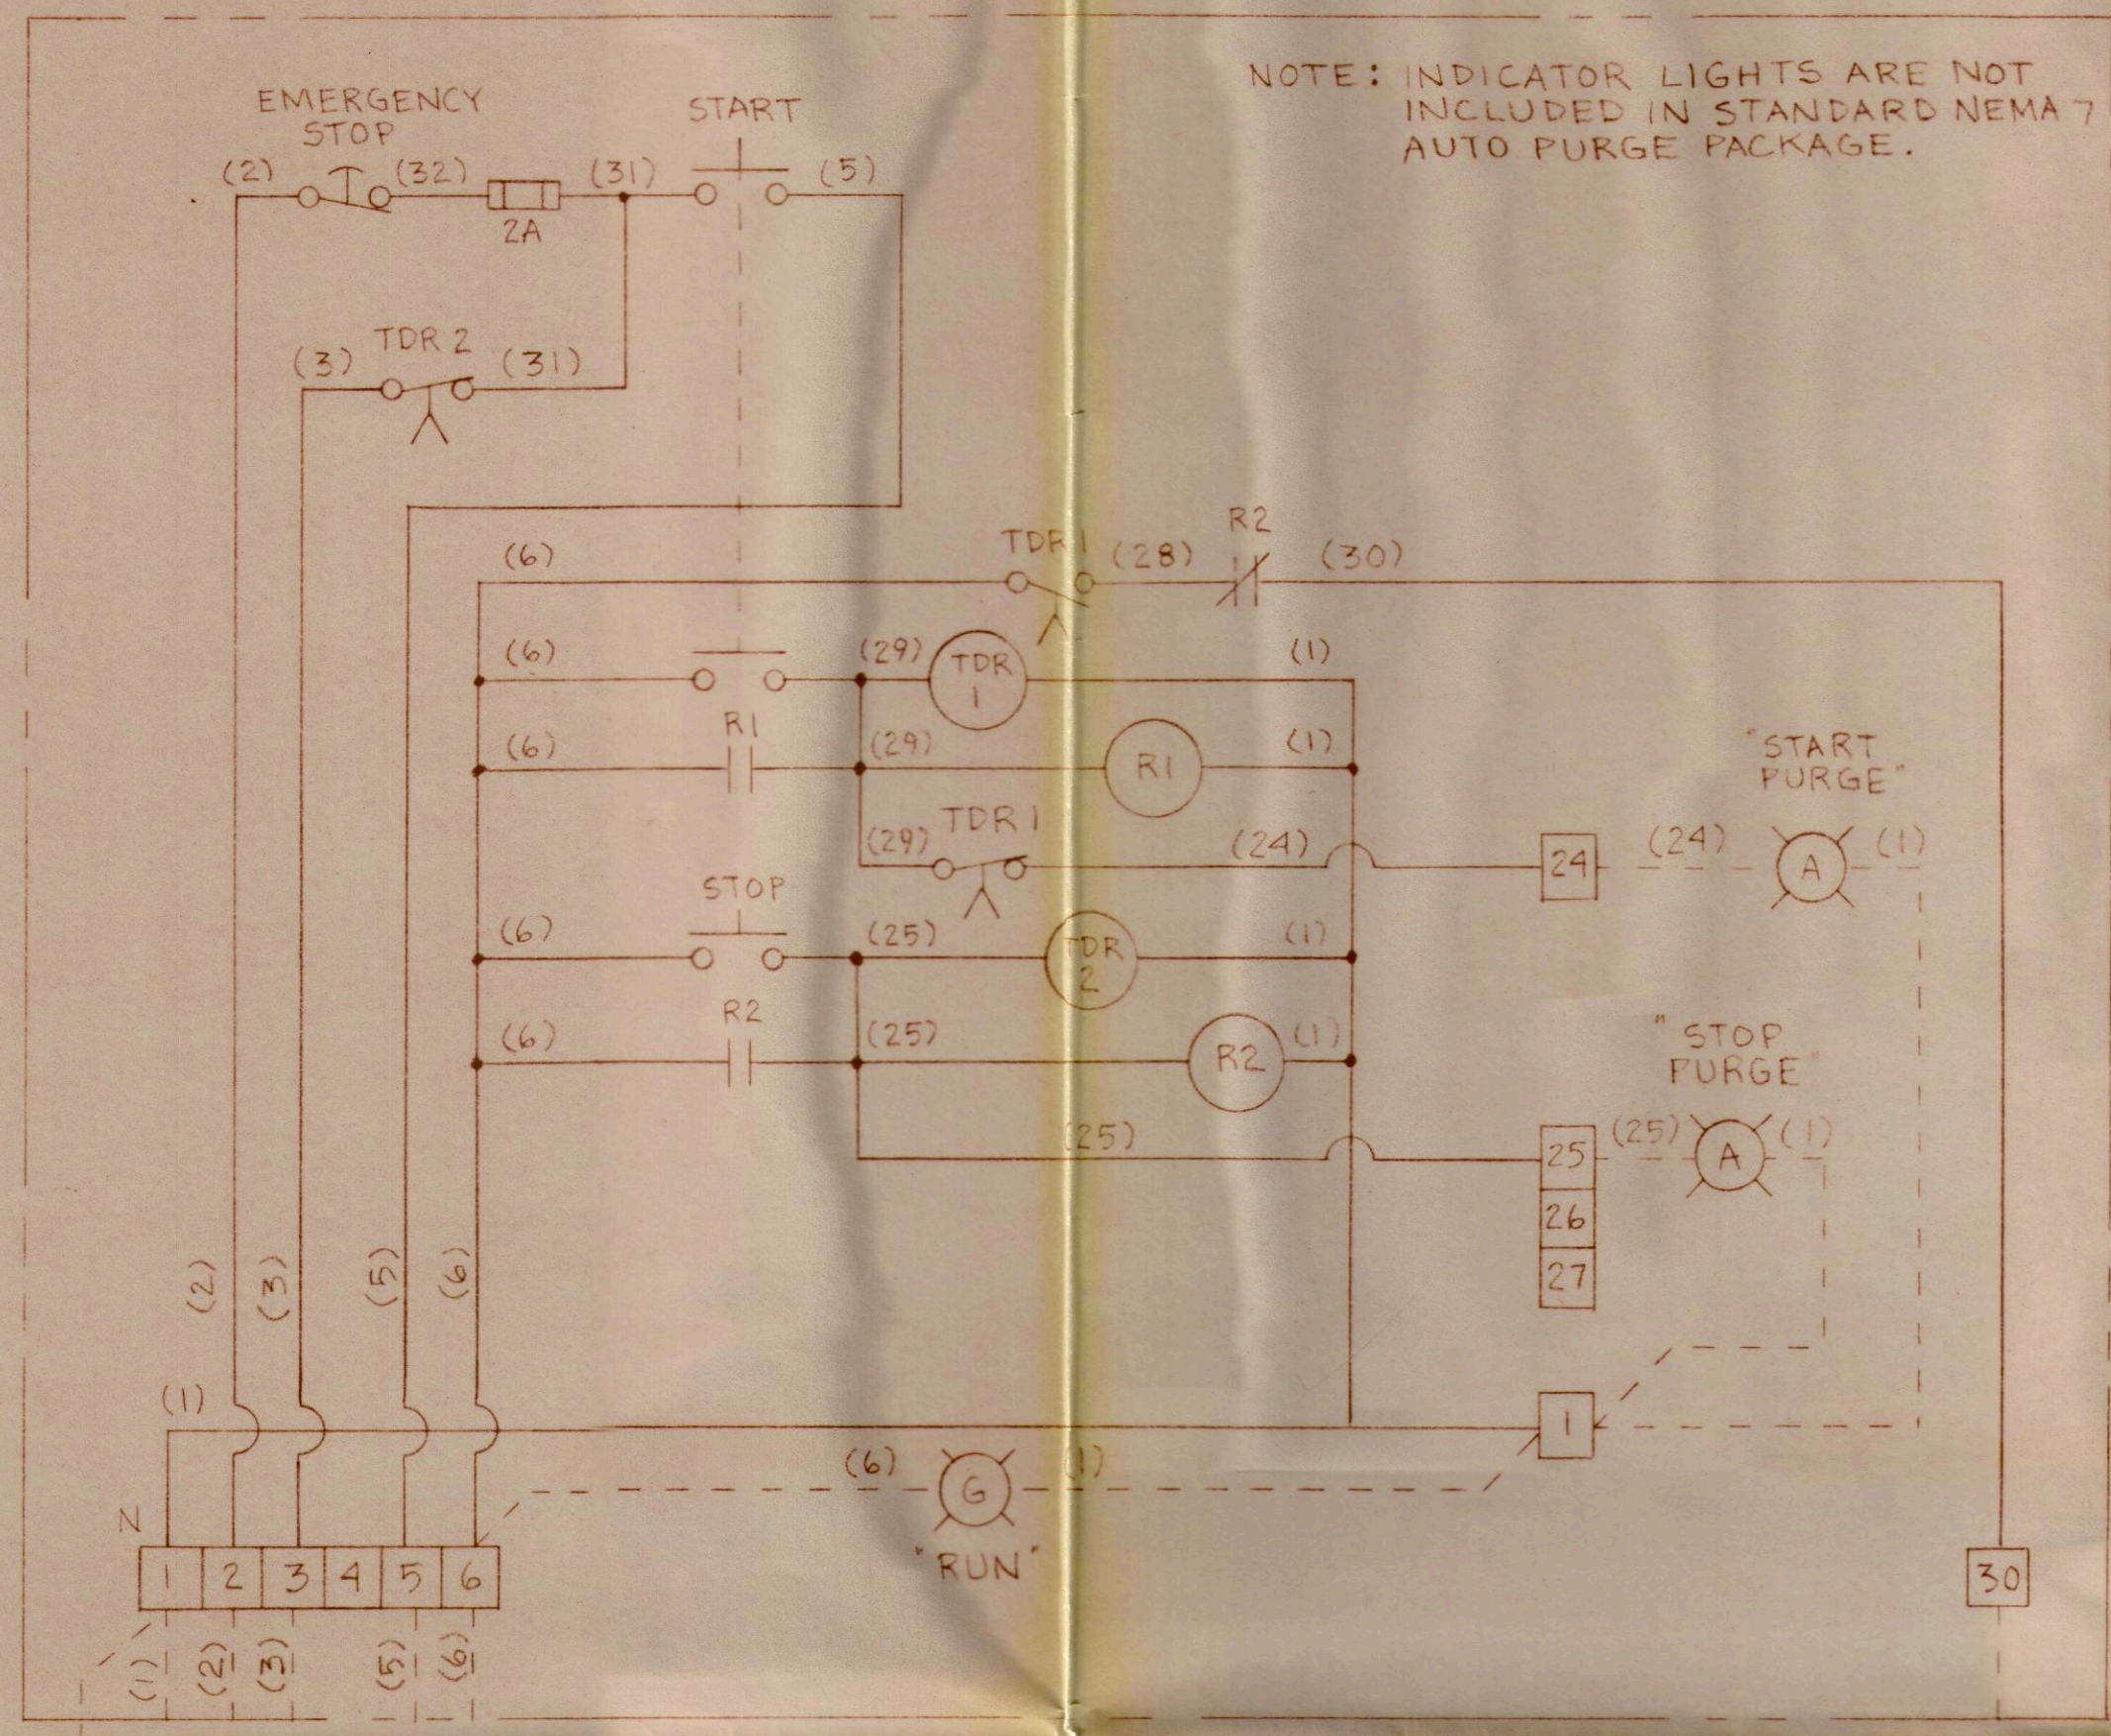



AUTO PURGE CONTROLLER (NEMA 7, DWG. NO. D1397)

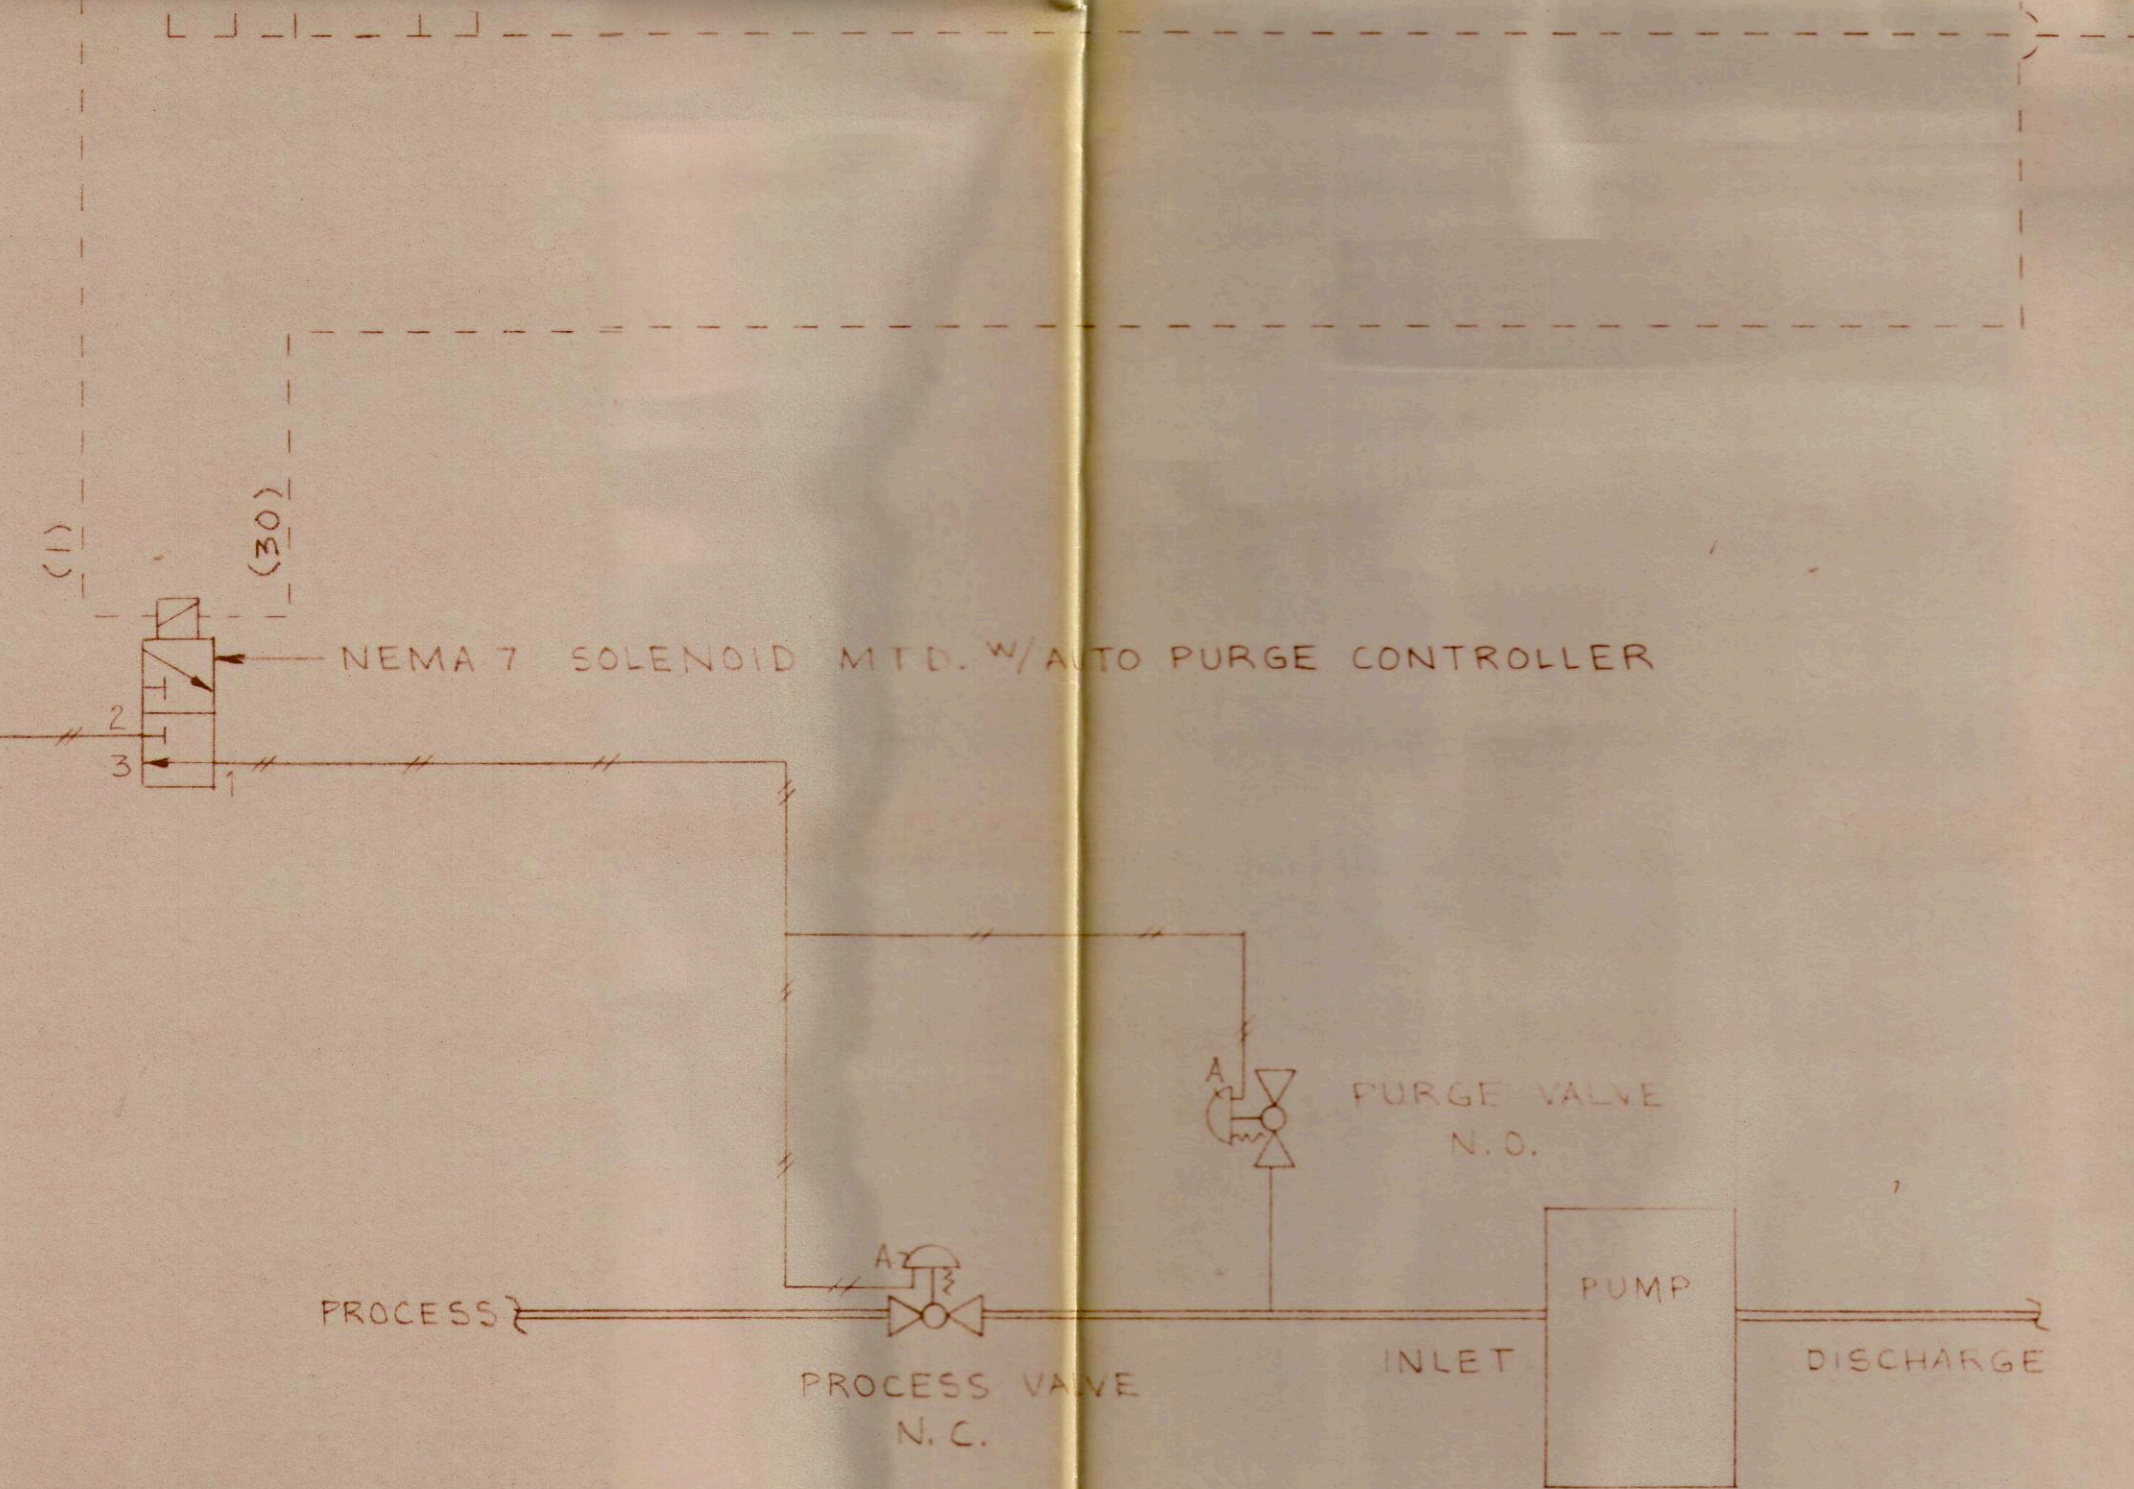

BUSCH HUCKEPACK STARTER (DWG. NO. A1603)

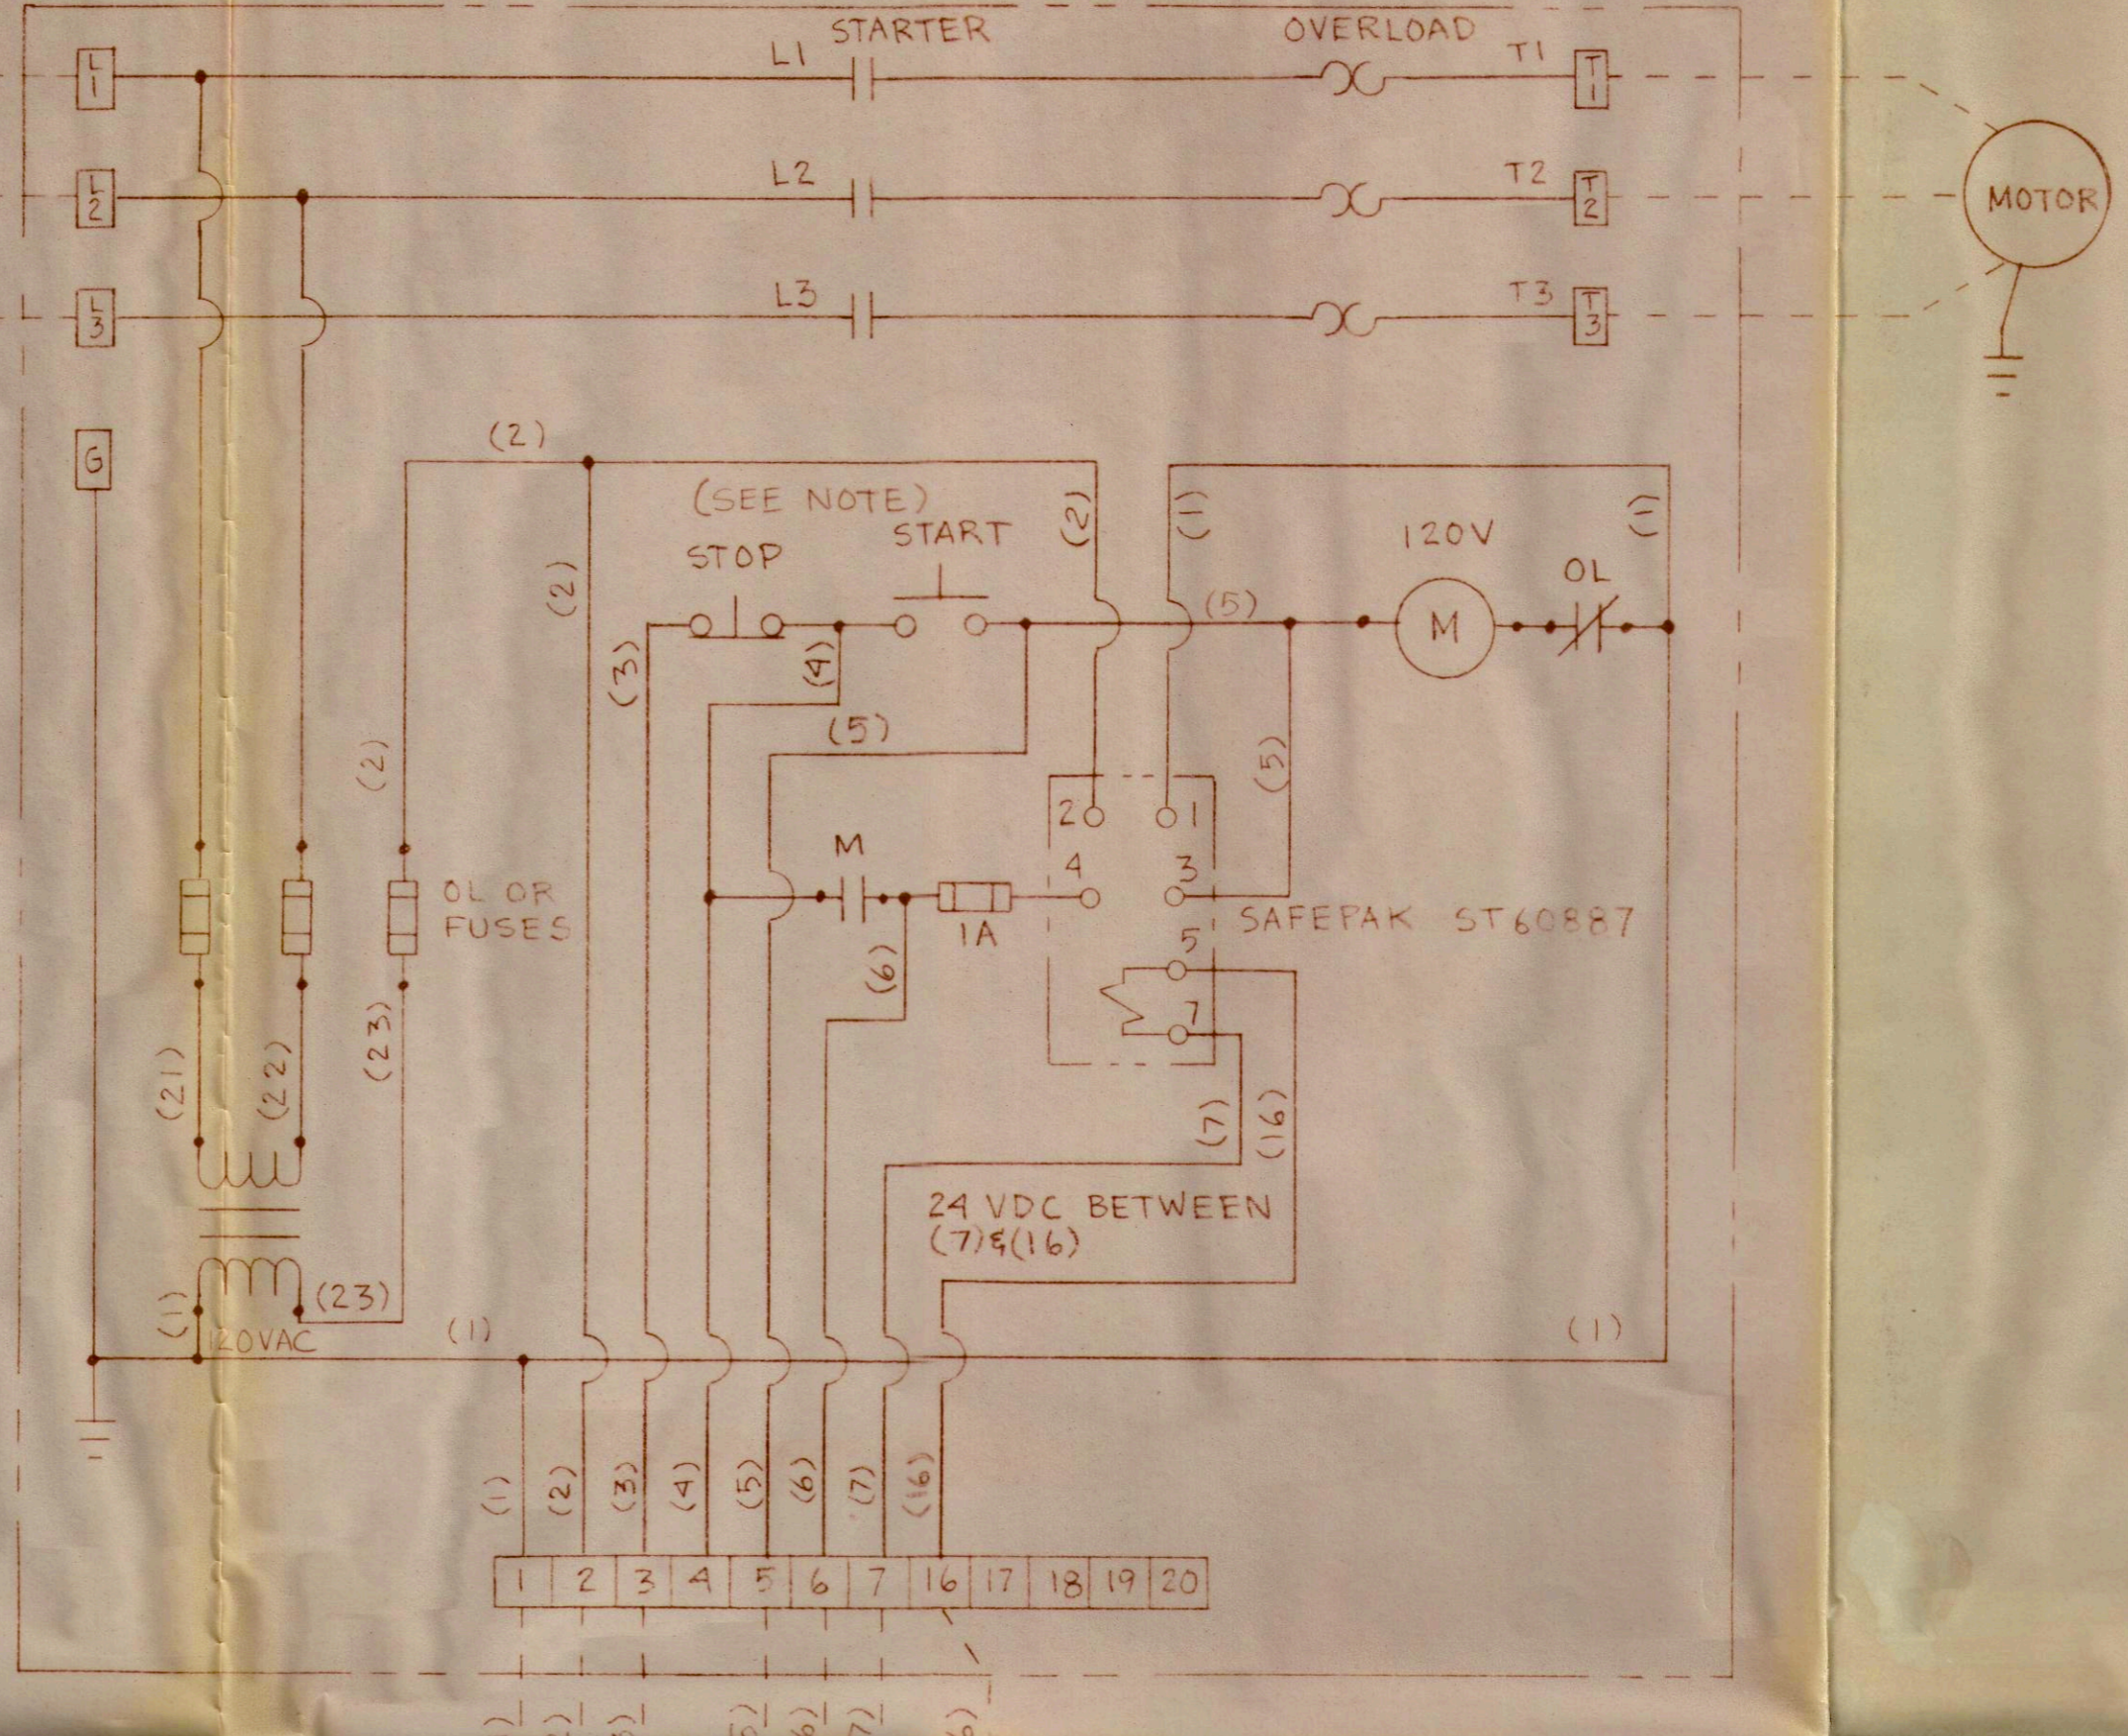

5 WIRES

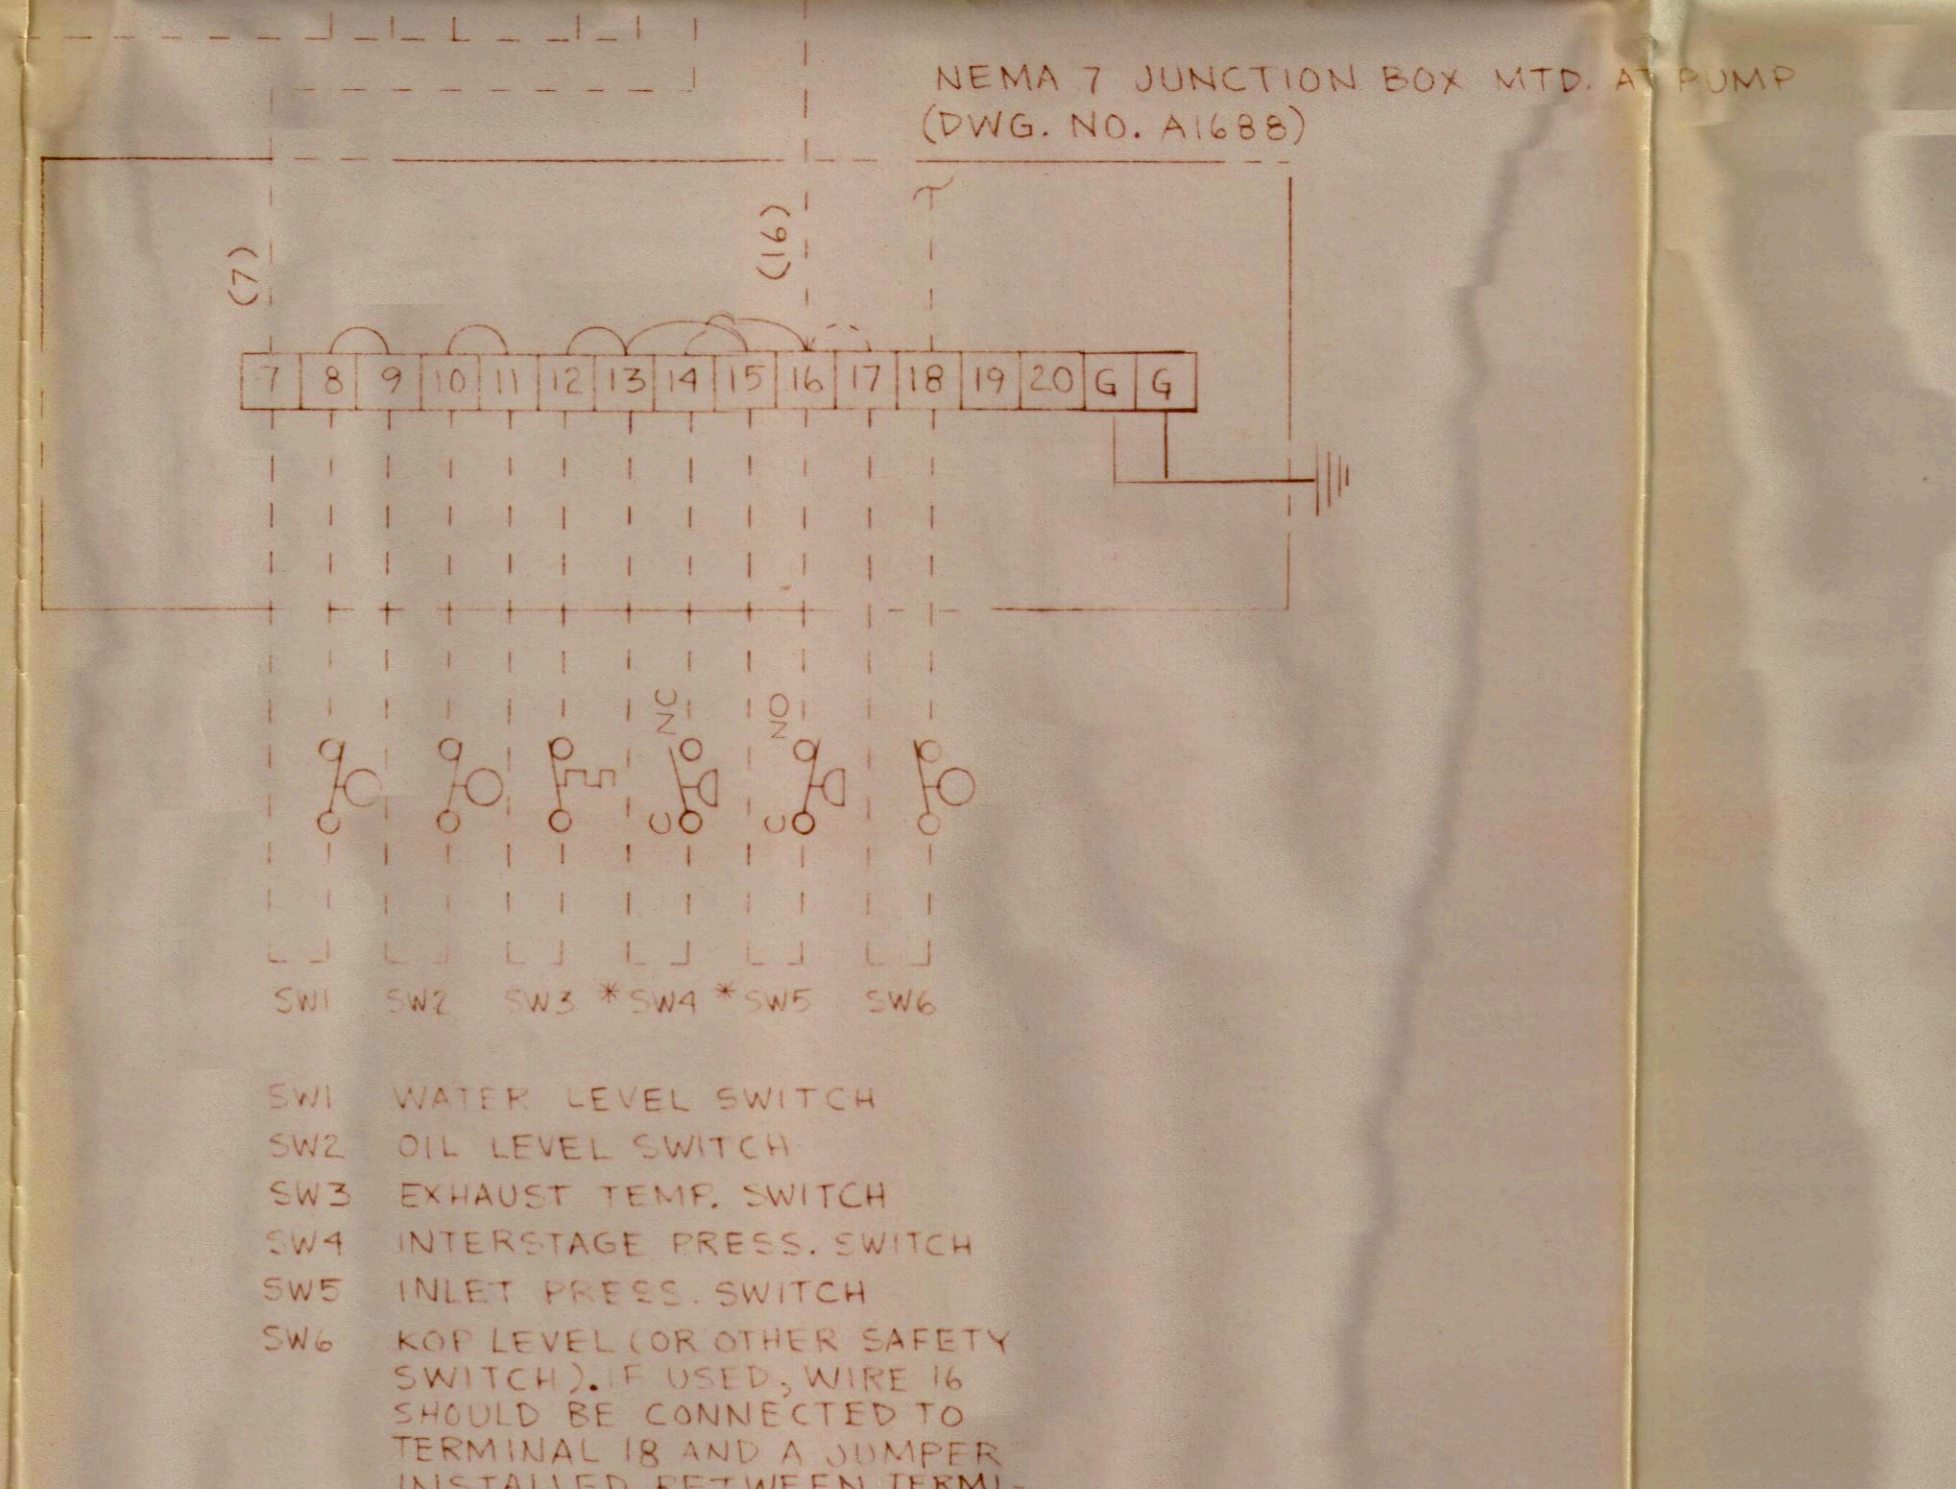

- SW1 WATER LEVEL SWITCH
- SW2 OIL LEVEL SWITCH
- SW3 EXHAUST TEMP. SWITCH
- SW4 INTERSTAGE PRESS. SWITCH
- SW5 INLET PRESS. SWITCH
- SW6 KOF LEVEL (OR OTHER SAFETY SWITCH). IF USED, WIRE 16 SHOULD BE CONNECTED TO TERMINAL 18 AND A JUMPER INSTALLED BETWEEN TERMINALS 16 & 17.

\* SW4 & SW5 ARE VACUUM SWITCHES AND OPERATE IN REVERSE OF NORMAL PRESSURE SWITCHES

NOTE: THIS DRAWING IS AN INSTALLATION DRAWING. SOME UNITS MAY BE SUPPLIED BY THE CUSTOMER.  
START & STOP PUSHBUTTONS ARE EXISTING ON BUSCH STANDARD STARTER. PUSHING START BUTTON ON STARTER BOX WILL ALLOW PUMP TO RUN WITHOUT CONNECTING TO PROCESS.

HB03

THIS DRAWING IS FOR PUMPS WITH INLET PRESSURE SWITCH

<b>BUSCH</b> Busch, Inc.	
SCALE: NONE	APPROVED BY: <i>R. J. ...</i>
DATE: 4-21-86	REVISION:
WIRING DIAG/AUTO PURGE SYSTEM	
B 1052 3-3-87	DRAWING NUMBER: D1574B
REV. ECO NO. DATE	NEMA 7