
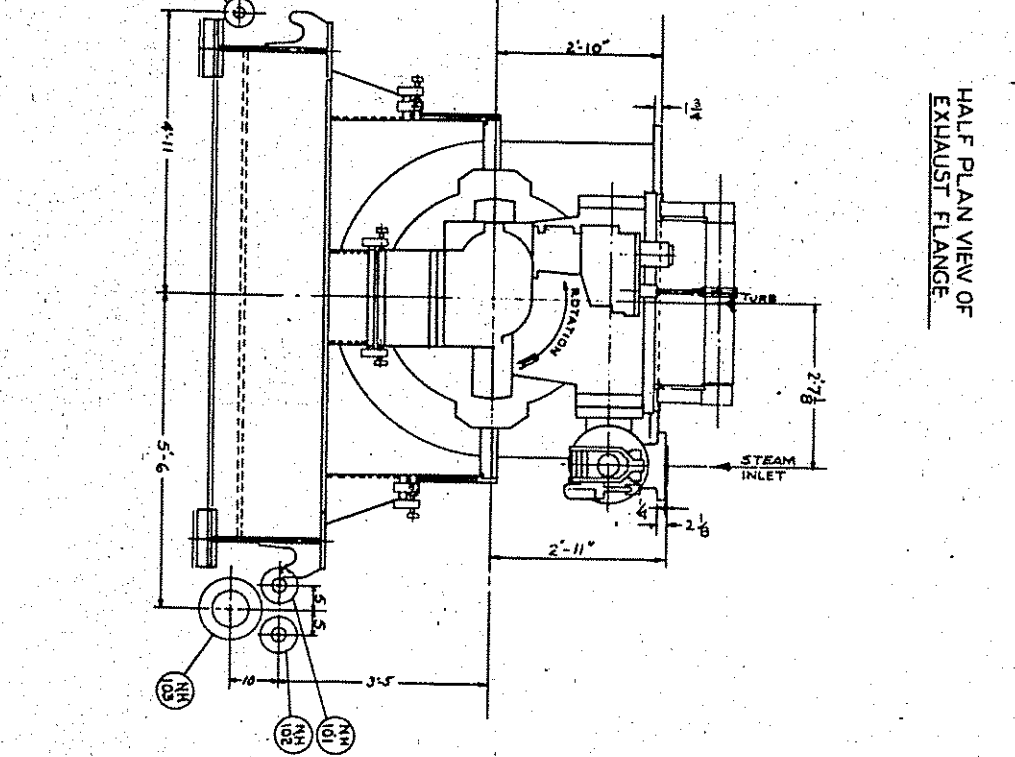


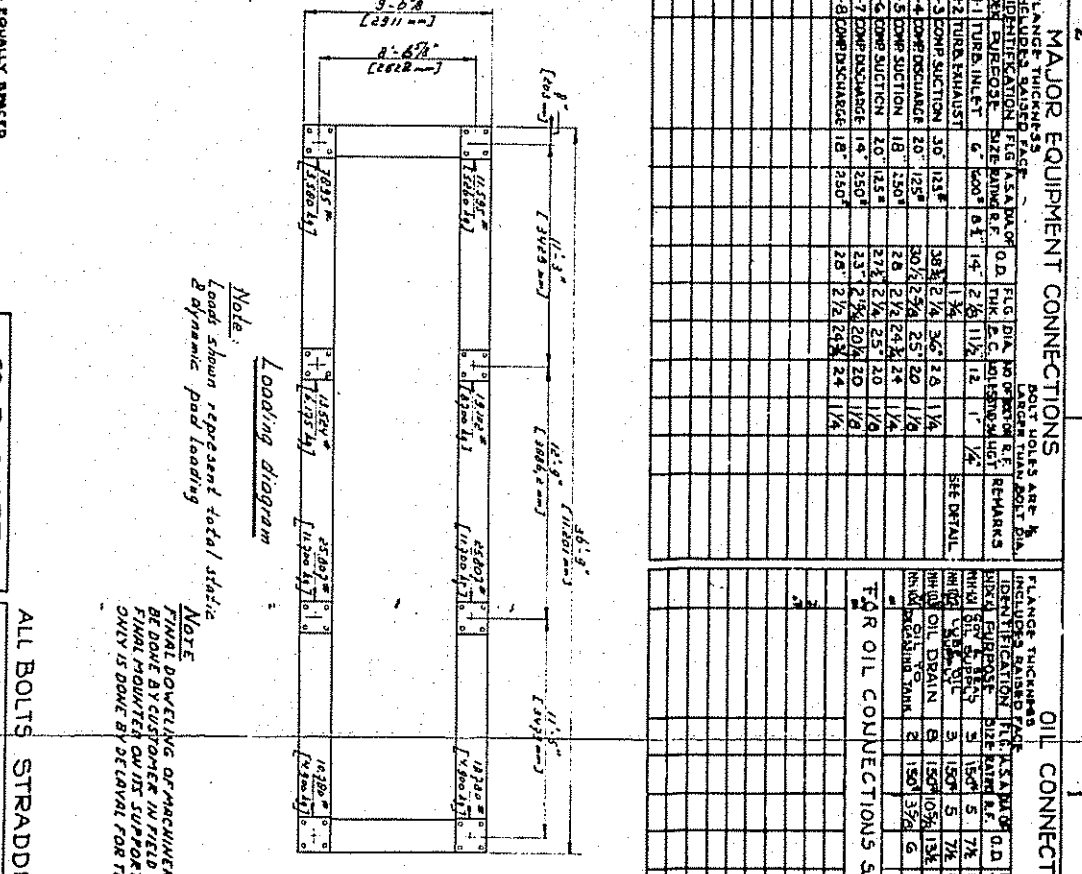

Note

Values shown represent total static
downward point loads.

Loading diagram

ALL BOLTS STRADDLE CENTER LINE

[illegible][illegible]